Arecorder v. 0.9



Arkadiusz Paliński Gdańsk, 2013

Acknowledgements

Special thanks to Andrzej and Robert Magiera, without their help i wouldn't be able to create Arecorder.

Table of contents

Acknowledgements				
1.	Intro	duction	4	
2.	Conn	ectors	6	
	2.1.	Power source	6	
	2.2.	Additional buzzer connector	6	
	2.3.	Connector for choosing parameter sets	7	
	2.4.	Micro SD card connector	7	
	2.5.	Microcontroller programming pins	9	
	2.6.	User programming connector	9	
	2.7.	Fuse firing	9	
3.	Meas	ured data formatting	10	
	3.1.	Formatting of file containing measured data	10	
		3.1.1. Header	10	
		3.1.2. Measured data	11	
		3.1.3. Summary of flight	12	
	3.2.	Formatting of file containing summary of flight	12	
4.	Desci	ription of operation	14	
	41	Calculations made by Arecorder	14	
	4.2	State 0 - awaiting for initialization complete	15	
	1.2.	4.2.1. Configuration mode	16	
		4.2.2. Flight mode	16	
	4.3.	State 1 - awaiting for rocket launch	17	
	4.4.	State 2 - first stage engine active	18	
	4.5.	State 3 - first stage engine burnout, awaiting for end of second stage	-	
		engine ignition delay	18	
	4.6.	State 4 - awaiting for firing second stage engine and awaiting for		
		detecting apogee	18	
	4.7.	State 5 - second stage engine active	19	
	4.8.	State 6 - second stage engine burnout, awaiting for detecting apogee	19	
	4.9.	State 7 - drogue parachute fired, awaiting for condition to trigger main		
		parachute	19	
	4.10.	State 8 - awaiting for landing	20	
	4.11.	State 9 - rocket has landed	20	
	4.12.	State 10 - disable data recording	20	
	4.13.	State 11 - buzzer beeping	21	
5.	Techi	nical characteristics	22	

	5.1.	Absolute maximum ratings	22
	5.2.	Electrical characteristics	23
	5.3.	Physical and mechanical parameters	24
6.	Dime	ntions	25
7.	F.A.()	27
A.	Gloss	sary of terms used in this instruction	28
B.	Force	es acting upon rocket	30
	B.1.	Forces acting upon rocket at launchpad	30
	B.2.	Forces acting upon rocket during the flight	31
C.	Histo	ry of changes	34

1. Introduction

- pressure measuring in range 20 110 kPa (which corresponds to altitude 11,7 km or 7,3 miles),
- acceleration measurement three axis \pm 24 g, one axis (along rocket axis) \pm 80 g,
- temperature measurement inside rocket in range -50 to +130 [°C]
 (-58 to 266 [°F]),
- data recording into microSD card,
- frequency of data sampling 100 Sa/s,
- Kalman filter implemented to reduce noise in pressure data,
- detection and signalling of connected fuses,
- firing up to three fuses two parachutes and one for second stage engine ignition,
- firing main parachute when altitude parachute failure is detected,
- detecting and recording inclination of rocket at launchpad,
- measuring of Arecorder's power supply,
- programmable delay between burnout of first stage engine and firing second stage engine,
- selection of one of four sets of Arecorder configuration parameters,
- Arecorders configuration parameters and owners first name, last name and phone number programming by software installed on a PC computer,
- writing summary of several most important flight parameters into separate file.

Arecorder is a device designed to record data during flight of rocket and trigger fuses in specified moments. Device is suited for medium and big model rockets, also two-stage and/or supersonic, that do not exceed altitude 11,7 km (7,3 miles). Employed algorithms allow to detect abnormal situations (e.g. rocket flying at low inclination) and react to them properly reducing risk rocket destruction.

It is not necessary for user to read whole manual. However it is recommended to read chapters 1, 2, 4.2 i 4.3 oraz 7.

ATTENTION - If operation of Arecorder at any moment is different from designed, please send all avaible information about flight (especially Arecorder measurements and videos from rocket's onboard camera) to designer's mail arekpalinski@gmail.com in order to verify Arecorder operation and correction of possible errors. Designer have rights to update manual without prior notice.

2. Connectors



Figure 2.1. Arecorder's connectors.

- 1. power supply
- 2. additional buzzer
- 3. connectors for choosing parameter sets
- 4. micro SD card connector
- 5. firmware programming connector
- 6. communication connector
- 7. fuses connectors

2.1. Power source

Arecorder accepts any power source which can supply voltage in range 4 - 10 V and has low impedance (i.e. can source high current). If Arecorder is being used only as a data recorder (it does not have to fire fuses and no fuses are connected) it can be powered with any power supply with voltage in range 3,8 - 10 V.

Recommended power supply is one or two LiPo cells (if one cell is being used it should be fully loaded).

See also 5.1 and 5.2.

2.2. Additional buzzer connector

To additional buzzer connector can be connected any direct current powered buzzer. Additional buzzer's maximum voltage input must be greater than Arecorder's power supply. Additional buzzer should be used only when volume of built-in buzzer is insufficient.

2.3. Connector for choosing parameter sets

This connnector enables user to choose one of four parameter sets by appropriately setting jumpers. Affected parameters are:

- main parachute deployment altitude,
- launchpad height,
- delay between burnout of first stage engine and ignition of second stage engine.

	parameter set number
O Arecorder 00 R5 R4 v0.9 016 R5 R4 v0.9 12 C7 x1 03 D4	1
Arecorder Arecorder aug aug aug b c c c c c c c c c c c c c	2
Arecorder R5 R4v0.9 P9 P8 07 X1 03 D4	3
Arecorder P3 P3 P4 P3 P4 P3 P4 P3 P3 P4 P3 P3 P3 P4 P3	4

Tabela 2.1. Choosing parameter sets by appriopiately setting jumpers

Arecorder is reading data from jumpers only once, at power up. Removing or inserting jumpers later has no effect on Arecorder's operation.

2.4. Micro SD card connector

User should put micro SD card (micro SDHC card version is strongly recommended) inside micro SD connector. All measured data will be recorded onto this card. Arecorder is able to write files with numbers from 1 to 99 in one card (at each power on Arecorder is creating two files with the same numbers - one with all data and one with flight summary), though it is recommended to format card before each flight.

First connectors top tab should be moved in the direction poin- ted by arrows at top side of Are- corder, closer to micro SD con- nector and "OPEN" sign at the connectors top tab.
Next connectors top tab should be opened by lifting end of tab located near middle of Arecor- der.
User can then remove micro SD card.
To close connector's tab all the steps must be reversed (it is im- portant to latch connector by moving connector's top tab into direction pointed by "CLOSE" sign at connectors top tab). If micro SD card is absent it is re- commended to close and latch connector.



It is recommended to format SD card before each flight although it is not necessary.

2.5. Microcontroller programming pins

Connector used to program Arecorder's firmware. User should not use this connector.

2.6. User programming connector

User can connect a PC with installed AreConfig application to Arecorder's user programming connector. It will enable programming user preferences such as owners name, phone number and Arecorder's parameter sets. With AreConfig user also can test firing fuses.

There is microcontroller's UART interface attached to this connector, which sends data through RS-232 interface (CMOS logic levels). Connection settings are: baudrate 115200, 8 data bits, no parity, one stop bit, no flow control.

2.7. Fuse firing

Fuses should be connected to the appropriate fuse out (PAR1, PAR2, and STG2 which fire appropriately drogue parachute fuse, main parachute fuse and second stage engine fuse).

Each fuse out is connected to positive power supply and drain of appropriate transistor. In case fuse is about to be fired, appropriate transistor is turned on which connects fuse to ground through transistor and causes conducting high current (current is dependent on power supply).

Each of fuse has additional transistor connected which, when enabled, conducts small current through fuse and LED. This current is dependent on power supply and is in range 2 - 8 mA. It is too small to fire a fuse but large enough to emit light by LED and indicate that the fuse is present.

3. Measured data formatting

Data are saved on SD card in *.CSV format i.e. columns are separated by comma and rows are separated by new line. Data written in this manner can be opened in any spreadsheet.

3.1. Formatting of file containing measured data

File containing data consists of three parts - header, measured data and summary of flight.

3.1.1. Header

In the header are written configuration data, Arecorders calibration data, owners name, surname and phone number and information about hardware and firmware version of Arecorder.

```
Hardware version, 0.9
1
2 Software version, Aug 31 2013 16:24:10
3 Serial number,1
4 Owner name, Arkadiusz Palinski
5 Owner phone ,+ 48 697-541-538
6 Configuration selected,1
7
   X_1_g (24g),85
8 Hx_1_g (80g),24
9 X_0_g (24g),4
10 \text{ Hx}_0_g (80g), -47
11 Y_0_g (24g), 7
12 Z_0_g (24g), 2
13 Hacc present, 1
14 SecondEngineDelayTrigger [s],0
   MainParachuteTriggerHeight [m],200
15
16 LaunchpadHeight [m],2
   TemperatureOffset1 [deg],1
17
   Pressure coefficient #1,44330.77
18
   Pressure coefficient #2,0.1902632
19
   Pressure at sea level [Pa],101325
20
21
   Samples per second, 100
22
23 seconds, 1/100 of second, X_acc, Y_acc, Z_acc, HX_acc...
```

- 1. line informing about hardware version of Arecorder,
- 2. line informing about software version of Arecorder (code compilation time and date),
- 3. serial number,
- 4. owners name,
- 5. owners phone number,
- 6. chosen parameter set number detected at the power up of Arecorder,
- 7. number of divs per 1 g in ± 24 g accelerometer,
- 8. number of divs per 1 g in ± 80 g accelerometer,
- 9. calibration data number of divs in X axis in ± 24 g accelerometer, when measuring accelerationg is 0 g,
- 10. calibration data number of divs in X axis in ± 80 g accelerometer, when measuring accelerationg is 0 g,
- 11. calibration data number of divs in Y axis in ± 24 g accelerometer, when measuring acceleration is 0 g,
- 12. calibration data number of divs in Z axis in ± 24 g accelerometer, when measuring accelerationg is 0 g,
- 13. information about detection accelerometer ± 80 g,
- 14. delay between first engine burnout and ignition of second stage engine (in seconds),
- 15. main parachute trigger altitude (in meters),
- 16. launchpad height (in meters),
- 17. calibration data number of Celsius degrees subtracted from temperature sensor measurements (temperature data are written after subtraction),
- 18. first coefficient used to calculate altitude from pressure,
- 19. second coefficient used to calculate altitude from pressure,
- 20. pressure at mean sea level (in Pa), constant value,
- 21. number of measurements per second,
- 23. column descritions.

3.1.2. Measured data

Data consists of rows filled with data. Columns in each row are separated with commas, dot is used as decimal separator. An example of row with data: 95,28,627,-6,-9,120,100088,100126,82.5,35.9,46.5,2

where:

Row ends with "end of line" char.

95,28	— time in seconds and 1/100th of second,
627,-6,-9,120	— raw measured acceleration data in axis X, Y, Z of ± 24 g ac-
	celerometer and axis X of ± 80 g accelerometer, respectively,
100088,100126	- raw pressure measured by pressure sensor and pressure
	after Kalman filtering, units are [Pa],
82.5	— rocket velocity, calculated by Arecorder, units are $\left[\frac{m}{s}\right]$
35.9	— altitude calculated from pressure data, units are [m],
46.5	- altitude calculated from accelerometer data, units are [m],
2	- current Arecorder state number (see also 4.1),

3.1.3. Summary of flight

It is a copy of data from summary data file, see description of summary data file in section 3.2.

3.2. Formatting of file containing summary of flight

Flight summary is a list of several most important flight parameters. Flight summary data is written after Arecorder detects rocket landing.

```
1
  Kat rakiety podczas startu [stopnie],80.7
2 Cisnienie na poziomie ziemi [Pa],100552
3 Cisnienie na pulapie [Pa],95664
4
   Predkosc w osi rakiety maksymalna [m/s],91.2
5 Wysokosc maksymalna (acc) [m],426
6 Wysokosc maksymalna (cisnienie) [m],417
   Start rakiety [s],94.18
7
8
  Koniec pracy silnika pierwszego stopnia [s],95.52
9
   Wlaczenie silnika drugiego stopnia [s],95.63
10 Poczatek pracy silnika drugiego stopnia [s],104.62
   Koniec pracy silnika drugiego stopnia [s],104.62
11
12 Czas osiagniecia pulapu [s],103.72
13 Czas osiagniecia minimalnej predkosci na pulapie [s],103.99
14 Czas odpalenia spadochronu-pilota [s],104.70
15 Czas odpalenia spadochronu glownego [s],125.76
16 Czas ladowania [s],161.00
17 Czas pracy silnika pierwszego stopnia [s],1.34
18 Czas pracy silnika drugiego stopnia [s],0
19 Czas lotu na pulap [s],9.54
20 Calkowity czas lotu [s],66.82
```

 angle between rocket and ground plane at the launchpad before launch, units in [°],

- 2. measured pressure at the ground level before launch, units in [Pa], data after Kalman filtering,
- 3. measured pressure at apogee, units in [Pa], data after Kalman filtering,
- 4. maximum velocity in rocket axis during the fligh, calculated from acceleration data, units in $\left[\frac{m}{s}\right]$,
- 5. maximum altitude, units in [m], calculated from acceleration data,
- 6. maximum altitude, units in [m], calculated from pressure data,
- 7. time when rocket launch has been detected, units in [s],
- 8. time when burnout of first stage engine was detected, units in [s],
- 9. time when Arecorder fired fuse igniting second stage engine, units in [s],
- time when igniting second stage engine was detected firing fuse is not equivalent to igniting second stage engine, so these two events are separated, units in [s],
- 11. time when burnout of second stage engine was detected, units in [s],
- 12. time when apogee was detected, units in [s],
- 13. time between burnout of engines and firing parachutes, when rocket has minimum velocity, units in [s],
- 14. time when drogue parachute fuse was fired, units in [s],
- 15. time when main parachute fuse was fired, units in [s],
- 16. time when rocket landing was detected (detection is few seconds after actual landing), units in [s],
- 17. first engine burning time (difference between ignition and burnout of engine), units in [s],
- 18. second engine burning time (difference between ignition and burnout of engine), units in [s],
- 19. time from launch to detecting apogee, units in [s],
- 20. total flight time (difference between detected launch and landing times, becouse of delay in detecting landing it may be a few seconds too long), units in [s],

For data from positions 7 to 16 time is being calculated from Arecorder power up.

4. Description of operation

After power up Arecorder is in one of predefined states. Each of them represents different part of rocket flight and different decidions made by Arecorder.

state number	description
0	awaiting for initialization complete
1	awaiting for rocket launch
2	first stage engine active
3	first stage engine burnout, awaiting for end of second stage
	engine ignition delay
4	awaiting for second stage engine ignition and awaiting for de-
	tecting apogee
5	second stage engine active
6	second stage engine burnout, awaiting for detecting apogee
7	first parachute fired, awaiting for condition to trigger main pa-
	rachute
8	awaiting for landing
9	rocket has landed
10	disable data recording
11	buzzer beeping

Tabela 4.1. Arecorder states

4.1. Calculations made by Arecorder

Raw data measured by Arecorder are acceleration in three axis (± 24 g in three axis and ± 80 g in rocket axis), pressure measurements and temperature measurements (temperature measurements are not used in any calculations). These data are written in raw format (directly measured by sensors, with no calculations), only temperature data is converted from measured voltage to temperature data in [°C] with correction offset applied.

Before launch, Arecorder measures rocket angle. Rocket angle is angle between ground plane and axis parallel to the rocket axis. This angle is used for calculating rocket height and velocity during the fligh; it is then important to care-



Figure 4.1. Axis of a rocket with marked accelerations measured by particular accelerometers.

fully mount Arecorder to the rocket, so that Arecorder's axis and rocket axis are as parallel as possible. See also drawing A.1.

Rocket angle is updated in real time, so if after Arecorder's power up and before launch rocket angle will change, it will be updated. After launch detection calculation of rocket angle is paused until rocket leaves launchpad. After that rocket angle is calculated on the basis of accelerations acting upon rocket (engine thrust and gravity) and previous rocket angle. See equation B.12.

On the basis of acceleration at the rocket axis and rocket angle Arecorder calculates rocket velocity, rocket ascend speed, altitude and updated rocket angle. Rocket velocity is calculeted based on data from accelerometer ± 24 g, but in case the measured acceleration is higher than 20 g, Arecorder will use data from accelerometer ± 80 g.

Pressure is first being filtered using Kalman filter to reduce noise. Filtered pressure is then used to calculate height above mean sea level (MSL) of launchpad which will be used as a zero point for calculating relative altitude (from absolute altitude above mean sea level calculated from pressure).

4.2. State 0 - awaiting for initialization complete

After power up, Arecorder sends through communication connector information about being switched on. After about one second Arecorder switches into either "Flight" or "Configuration" mode and this selection will not change until power down.

Before switching to one of operation modes, Arecorder beeps the number of chosen parameter set, initializes sensors, reads programmed parameters, writes pressure data (used to calculate reference altitude for relative altitude measuring) and begins testing presence of fuses (if fuse presence is tested, red LEDs are litted next to detected fuses).

4.2.1. Configuration mode

In order for Arecorder to switch to configuration mode, user needs to attach a UART-USB adapter. The adapter must be connected to a PC with Areconfig application running and properly configured. See Areconfig manual fo further details.

In configuration mode user can edit few Arecorder parameters:

- altitude at which main parachute will be deployed,
- launchpad height,
- delay between first stage engine burnout and second stage engine ignition,
- owner's first and last name and phone number.

Beside the last position, all settings are programmed separately for each four parameter sets chosen by jumpers.

Arecorder always stays in AWAITING_FOR_ARECORDER_READY state when it is in configuration mode.

Detailed description of configuration of Arecorder by Areconfig application is in Areconfig manual - http://www.palinski.org/Areconfig.

4.2.2. Flight mode

If Arecorder does not detect adapter attached to computer with Areconfig application running and configured, flight mode is switched on. In this mode Arecorder initializes micro SD card and creates two files to which data will be written - one file named "MEASxx.CSV" and one named "SUMMxx.CSV", where xx is two-digit number set to consecutive files in a card; MEAS and corresponding SUMM numbers are always equal. After each card initialization Arecorder reads if there are any files written before and creates files with incremented number compared to previously written; in this way Arecorder can write up to 99 each MEAS and SUMM files in one card. However it is recommended to format card before each flight.

After files are created, there are three buzzer beeps - each of these beeps reprezents presence or lack of corresponding fuse. Short beep means that fuse is detected while long beep means that fuse was not detected by Arecorder. First beep represents fuse deploying drogue parachute, second beep represents fuse deploying main parachute and third beep represents fuse ignitting second stage engine.

Next Arecorder writes to MEAS file configuration data and there is one long beep indicating that initialization state is over and Arecorder starts reading sensors and detecting rocket launch; since that moment green LED starts flashing. After ten second fuse testing is turned off (red LEDs stop flashing). Arecorder changes state to state 1.

CAUTION - after Arecorder power ups and signals beginning of detecting rocket launch it is recommended to wait about two minutes for pressure sensor to stabilize.

In case of earlier launch error of altitude measurements can be as large as few meters.

In order to compensate this error user should use average of two pressure measurements - one immediately before launch and second shortly after landing - as a pressure for calculating reference altitude for relative altitude measuring.

Arecorder by means of beeping informs about chosen parameter set, detected fuses and beginning of detecting rocket launch. For example the following sequence of beeps (short line is short beep, long line is long beep and long space between lines is noticably longer pause between each beep sequence):

means that second parameter set is active, both parachute fuses are detected but second state engine fuse was not detected and Arecorder started detecting rocket launch and rocket can be launched.

4.3. State 1 - awaiting for rocket launch

In this state Arecorder is initialized and is reading data from sensors in order to detect rocket launch.

Rocket launch is detected when rocket reaches altitude higher than height of launchpad (height of launchpad is programmed earlier by user as a one of parameters). Based on acceleration data Arecorder calculates current rocket velocity and altitude. Additionally, if measured acceleration in rocket axis is greater than 1,2 g (i.e. rocket is accelerating more than 0,2 g), buzzer will start to beep indicating possible launch (until launch in confirmed by rocket reaching altitude higher than height of launchpad).

In this state if passible launch is not being detected, pressure at launchpad and rocket angle are updated.

If launch is detected Arecorder will start to write measured and calculated data in micro SD card starting from several samples before launch. Also rocket launch timestamp will be recorded (for later data written to SUMM file). After detection of rocket launch, Arecorder changes state to state 2.

4.4. State 2 - first stage engine active

In state 2 rocket is flying and first stage engine is active, i.e. thrust of first stage engine is greater that aerodynamic drag force (meaning that acceleration in rocket axis is greater than zero and rocket velocity is increasing). If rocket acceleration becomes lower than zero, a first stage engine burnout will be detected. Acceleration is filtered, so one acceleration measurement will not trigger false detection of burnout.

After burnout detection, first stage engine burnout timestamp is recorded and Arecorder changes state to state 3.

4.5. State 3 - first stage engine burnout, awaiting for end of second stage engine ignition delay

In state 3 Arecorder is awaiting for delay between burnout of first engine and second engine ignition delay (this delay is programmed earlier by user as a one of parameters), after which second stage engine fuse is fired.

In this state there is also a timestamp recorded - timestamp for firing second stage engine fuse.

After that Arecorder changes state to state 4.

4.6. State 4 - awaiting for firing second stage engine and awaiting for detecting apogee

State 4 is both awaiting for confirmation of firing second stage engine and awaiting for reaching maximum altitude.

If second stage engine thrust is greater than aerodynamic drag force, then second stage engine is active. While second stage engine is active, Arecorder is blocking deployment of first parachute. If second stage engine is active for minimum 0,5 s, then Arecorder changes state to state 5.

If there is no second stage engine or it failed to ignite, Arecorder detects if there are conditions to deploy first parachute. These conditions are described in state 6 - section 4.8 becouse they are identical. In case first parachute is deployed Arecorder changes state to state 7.

In this state Arecorder writes timestamp of second stage engine fire or, in case of no second stage engine (or failure to ignite it), Arecorder writes timestamp of maximum altitude and timestamp of minimum rocket velocity.

4.7. State 5 - second stage engine active

State 5 means that Arecorder detected firing of second stage engine and awaits for burnout. In this state it is impossible to deploy parachute.

Similarly as in state 2, if second stage engine generates thrust greater than aerodynamic drag force, it is active and Arecorder stays in state 5. Otherwise Arecorder changes state to state 6.

In this state Arecorder writes timestamp of burnout of second stage engine.

4.8. State 6 - second stage engine burnout, awaiting for detecting apogee

In state 6 Arecorder detects if apogee has been reached. Arecorder detects if pressure begins to rise (meaning lowering altitude). If pressure after Kalman filtering is higher than lowest recorded pressure for every sample taken within last second of measurements, Arecorder decides if drogue parachute should be deployed on the basis of altitude calculated from pressure. If altitude is lower than 200 m, Arecorder deploys drogue parachute immediately. If altitude is higher than 200 m Arecorder waits with deployment of drogue parachute until calculated rocket velocity reaches minimum.

In case of rocket angle at the launch is small, after reaching apogee, rocket axis velocity may be large. Drogue parachute's ropes can break if deployed when rocket velocity is too large. After reaching apogee rocket aerodynamic drag force may be so large, that rocket velocity is lowering despite rocket descending (immediately after reaching maximum altitude rocket axis is almost perpendicular to earth's plane, it's just slightly turned toward ground, so gravity force in rocket's axis is lower than aerodynamic drag force). Delay in drogue parachute deployment until rocket velocity reaches minimum will reduce risk of breaking parachute's ropes.

In this state Arecorder writes timestamp of reaching maximum altitude, timestamp of reaching minimum velocity. Also minimum measured pressure is recorded, which will be used to calculate maximum altitude.

After drogue parachute deployment, Arecorder changes state to state 7.

4.9. State 7 - drogue parachute fired, awaiting for condition to trigger main parachute

In state 7 Arecorder is detecting how rocket acts after deployment of drogue parachute. If rocket is descending with parachute deployed, main parachute will be deployed when rocket descends below programmed main parachute trigger altitude (the default is 200 m).

CAUTION - Arecorder will deploy main parachute at programmed altitude in respect to launchpad. If rocket is descending on place, which is higher above mean sea level than launchpad, the actual main parachute trigger altitude relative to ground will be lower than desired. Similarly, if rocket descends on place, which is lower above mean sea level than launchpad, the actual main parachute trigger altitude relative to ground will be higher than desired. User should take into consideration topography of area near launch site, when programming main parachute trigger altitude.

After deployment of drogue parachute Arecorder turns on an algorithm designed to detect if drogue parachute was deployed properly. If Arecorder detects, that rocket descent rate is rising, the main parachute is deployed immediately. After five seconds from deployment of drogue parachute, algorithm is disabled for safety reasons. If drogue parachute was not deployed properly, algorithm will detect it within these five seconds. If drogue parachute was deployed properly, disabling algorithm after five seconds prevents false positive detection of drogue parachute failure, when rocket is descending safely.

In this state Arecorder writes timestamp of main parachute deployment. After main parachute deployment Arecorder changes state to state 8.

4.10. State 8 - awaiting for landing

In this state Arecorder is detecting rocket landing based of pressure data. Becouse algorithm is using pressure data after Kalman filter, landing can be detected even few seconds after actual landing.

In this state Arecorder writes timestamp of detected rocket landing.

After rocket landing Arecorder changes state to state 9.

4.11. State 9 - rocket has landed

After rocket landing detection, for safety reasons, Arecorder writes ten more seconds of data and then changes state to state 10. In state 9 buzzer beeping is turned on.

4.12. State 10 - disable data recording

In state 10 Arecorder stops writing data to micro SD card and writes summary of flight to both SUMM and MEAS files. When all data is written, Arecorder changes state to state 11.

4.13. State 11 - buzzer beeping

In this state buzzer beeps every second. Arecorder stays in this state until power off.

5. Technical characteristics

5.1. Absolute maximum ratings

CAUTION Stresses above those listed as *Absolute maximum ratings* may cause permanent damage to the Arecorder. These are stress ratings only and functional operaton of the Arecorder under these conditions or greater than described as *Electrical characteristics* is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.

Parameter	Min	Max	Unit	Comments
Supply voltage	-0,7	10,5	V	
Acceleration	-	1000	g	1), 2)
Pressure	20	110	kPa	1)
Operating temperature range	-40	85	[°C]	
Storage temperature range	-40	125	[°C]	

Tabela 5.1. Absolute maximum ratings

1) not tested,

2) any axis.

5.2. Electrical characteristics

Parameter	Min	Тур	Max	Unit	Comments
Supply voltage	4	4,2	10,5	V	1)
	3,8	4,2	10,5	V	2)
Operating current consuption	16,8	-	19,4	mA	3) 4)
	29	34	42	mA	3) 5)
	-	24	-	mA	6)
Acceleration measurement	0	-	24	g	7)
range	0	-	80	g	8)
	-	0,042	-	g	7)
Acceleration sensitivity	-	0,012	-	g	8)
Pressure measurement range	20	-	110	kPa	
Pressure sensitivity	-	1,5	-	Pa	
Temperature measurement	-55	-	130	[°C]	9)
range					
Temperature sensitivity	-	0,25	-	[°C]	

Tabela 5.2. Electrical characteristics

1) if Arecorder fires fuses,

2) if Arecorder does not fire fuses,

3) except when fuse is fired,

4) current consuption when data are not written to micro SD card,

5) current consuption when data are written to micro SD card,

6) average current consuption in state 11 - buzzer beeping,

7) LIS331HH accelerometer, three axis,

8) MMA6519 accelerometer, one axis,

9) temperature sensor measurement range exceeds operating temperature of the Arecorder,

5.3. Physical and mechanical parameters

Parameter		Unit	Comments
Width	25	mm	1)
Length	74	mm	
Height	14,5	mm	2)
Mass	15,6	g	

Tabela 5.3. Physical and mechanical parameters

1) if fuses are to be connected additional space at the Arecorder's side is required,

2) maximum height of component at the top side is 11 mm, at the bottom side is 2 mm, board with is 1,5 mm,

6. Dimentions



Figure 6.1. Dimensions associated with Arecorder's PCB board along with outlines of important components on top side.



Figure 6.2. Location of important components on top side of Arecorder's PCB board.

- C14 capacitor,
- D1 green LED,
- D2, D3, D4 red LEDs,
- P1 power supply,
- P2, P3, P4 fuses connectors,
- P5 additional buzzer,
- P6 firmware programming connector,
- P7 communication connector,
- P8, P9 connector for choosing parameter sets,

- P10 micro SD card connector,
- SP1 buzzer,
- U4 temperature sensor,
- U6 pressure sensor.



Figure 6.3. Location of important components on bottom side of Arecorder's PCB board.

- U2 microcontroller,
- U3 accelerometer ± 80 g,
- U4 accelerometer ± 24 g.

7. F.A.Q.

Does chamber containing Arecorder need to be isolated from parachute section?

No, it is not necessary. Maximum altitude is detected before fuse triggering and pressure change resulting from drogue parachute fuse firing will not change this value. However it is recommended to isolate Arecorder's chamber from parachute section, becouse it may influence parachute failure detection algorithm. At low altitudes it can also cause main parachute to deploy prematurely.

If during the flight there was accident and the Arecorder was destroyed, would there be any data recorded?

Yes, assuming micro SD card would be intact. Arecorder writes data to micro SD card every 200 ms. If Arecorder was destroyed, all data except last 200 — 800 ms would be recorded.

Does Arecorder need special preparations before flight?

No, user can just put Arecorder inside rocket in sucha way, that Arecorder's axis will be parallel to rocket axis and the mounting to rocket will be stiff. However it is recommended to copy flight data from micro SD card and format card after each flight. Before each flight it is recommended to make sure that battery powering Arecorder is fully charged.

What should i do if i don't want to connect any fuses to Arecorder? Do i have to connect something instead?

No, just don't connect any fuses. If fuses will not be connected to Arecorder, it will be signalled after power up. No matter if fuses were detected or not, Arecorder still will try to fire them (this is to prevent not firing fuses becouse detection was false negative). If there will be no fuses electric pulse will not be triggered. Arecorder does not detect if fuse was fired in reality (and if fuse was connected during firing it), there is only recorded time, when Arecorder released electric pulse which fires fuse.

A. Glossary of terms used in this instruction

Apogee

Point in flight path when rocket is at highest altitude.

Rocket axis

Line going from tip of the nose cone to the middle of the base of the rocket. In this axis engine is generating thrust. In the further part of manual the term "rocket acceleration" always meanss "acceleration in rocket axis".

Rocket angle

Smallest angle between rocket axis and plane perpendicular to local vertical direction.



Figure A.1. Visualization of rocket angle in respect to the ground. x is rocket axis, g is local vertical direction.

Relative altitude

This is the altitude above ground. This is the altitude user is interested in. In the further part of manual the term "altitude" always means "relative altitude".

Absolute altitude

This is the altitude above mean sea level (MSL).

Reference pressure

This is the pressure measured at the launchpad. It is used to calculate absolute altitude of launchpad and then subtracted from absolute pressure calculated in Arecorder in order to get relative altitude.



Figure A.2. Visualization of pressure measurements and height calculations. p_{MSL} is pressure at mean sea level (101.325 kPa), p_l is pressure at measured at launchpad (reference pressure), from which h_l , absolute altitude of launchpad is calculated. p_r is pressure measured by Arecorder during the flight; from this pressure absolute altitude of rocket (h_{ar}) is calculated.

B. Forces acting upon rocket

B.1. Forces acting upon rocket at launchpad



Figure B.1. Forces acting upon rocket at launchpad.

where:

 \overrightarrow{F}_{g} - gravity force, $\overrightarrow{F}_{g\parallel}$ - gravity force component parallel to the rocket axis, $\overrightarrow{F}_{g\perp}$ - gravity force component perpendicular to the rocket axis, α - rocket angle.

When rocket is standing at the launchpad, only gravity force is acting upon it. Becouse accelerations measured by accelerometers are proportional to perpendicular and parallel components of gravity force (see equations B.1, B.2 and B.3), Arecorder is able to calculate rocket angle by using equation B.4 or B.5.

$$\overrightarrow{a}_{g\parallel} = \frac{\overrightarrow{F}_{g\parallel}}{m} \tag{B.1}$$

$$\overrightarrow{a}_{g\perp} = \frac{\overrightarrow{F}_{g\perp}}{m} \tag{B.2}$$

$$\overrightarrow{a}_g = \frac{\overrightarrow{F}_g}{m} \tag{B.3}$$

where:

 \overrightarrow{a}_g - gravitanional acceleration, $\overrightarrow{a}_{g\perp}$ - gravitanional acceleration component perpendicular to the rocket axis, $\overrightarrow{a}_{g\parallel}$ - gravitanional acceleration component parallel to the rocket axis, \overrightarrow{F}_g - gravitanional force, $\overrightarrow{a}_{g\parallel}$ - gravitanional force component parallel to the rocket axis, $\overrightarrow{a}_{g\perp}$ - gravitanional force component perpendicular to the rocket axis, $\overrightarrow{a}_{g\perp}$ - gravitanional force component perpendicular to the rocket axis, $\overrightarrow{a}_{g\perp}$ - gravitanional force component perpendicular to the rocket axis, m - rocket mass.

$$\cos(\alpha) = \frac{\|\overrightarrow{a}_{g\perp}\|}{\|\overrightarrow{a}_{g}\|}$$
(B.4)

$$\sin(\alpha) = \frac{\|\overrightarrow{a}_{g\|}\|}{\|\overrightarrow{a}_{g\|}}$$
(B.5)

B.2. Forces acting upon rocket during the flight



Figure B.2. Forces acting upon rocket during the flight

where: \overrightarrow{F}_t - thrust,

 \vec{F}_d - aerodynamic drag force, \vec{F}_g - gravitaional force, $\vec{F} = \vec{F}_d + \vec{F}_t$ - net force of thrust and aerodynamic drag force, $\vec{F}_{t\parallel}, \vec{F}_{d\parallel}, \vec{F}_{\parallel}$ - vertical components of forces, $\vec{F}_{t\perp}, \vec{F}_{d\perp}, \vec{F}_{\perp}$ - horizontal components of forces. α - rocket angle during flight.

There are three main forces acting upon rocket during flight - thrust \vec{F}_t , aerodynamic drag force \vec{F}_d and gravitational force \vec{F}_g , which is shown in the drawing B.2. Thrust and aerodynamic drag force have the same direction, but opposite sense; they always act along the rocket axis. Gravitaional force is always parallel to local vertical direction and the sense is directed toward earth.

Acceleration measured by acceleration during the flight is proportional to net force of thrust and aerodynamic drag force.

$$a = \frac{\|\vec{F}\|}{m} \tag{B.6}$$

Accelerometers are not able to measure gravitational acceleration, becouse in reality integrated accelerometers measure only the difference between acceleration acting upon accelerometer's case and inner circuit - gravity acts upon whole accelerometer so there is no difference (at the launchpad accelerometers measure in reality force from the floor to the Arecorder counteracting gravitanional force). Gravitational acceleration is approximated by assumption, that at Arecorders maximum working altitude the gravitational acceleration is approximately equal to gravitational acceleration at launchpad and is equal to 9,81 m/s^2 .

At the flight Arecorder calculates horizontal and vertical acceleration from acceleration along rocket axis with the correction of gravitational acceleration in the case of vertical acceleration.

$$a_{\parallel} = a \sin \alpha - g \tag{B.7}$$

where:

 a_{\parallel} - vertical acceleration,

- a acceleration along rocket axis,
- α rocket angle during flight,
- g gravitational acceleration (9,81 m/s^2).

$$a_{\perp} = a \cos \alpha \tag{B.8}$$

where:

 a_{\parallel} - horizontal acceleration,

- a acceleration along rocket axis,
- α rocket angle during flight.

Arecorder calculates vertical (e.g. speed of altitude change) and horizontal velocity (speed of rocket changing distance from launchpad) according to equations B.9 and B.10 respectively. Vertical and horizontal velocities are updated at each measurement cycle by calculated change - vertical and horizontal velocities are the sum of all calculated velocity changes since rocket launch.

$$\triangle V_{\parallel} = a_{\parallel} \triangle t \tag{B.9}$$

where:

 $\triangle V_{\parallel}$ - change in vertical velocity in current measurement cycle,

 a_{\parallel} - vertical acceleration,

 $\triangle t$ - measurement cycle period (10 ms).

$$\triangle V_{\perp} = a_{\perp} \triangle t \tag{B.10}$$

where:

 $\triangle V_{\perp}$ - change in horizontal velocity in current measurement cycle,

 a_{\perp} - horizontal acceleration,

 $\triangle t$ - measurement cycle period (10 ms).

Velocity at rocket axis is calculated from vertical and horizontal velocities according to the equation B.11.

$$V = \sqrt{V_{\parallel}^2 + V_{\perp}^2} \tag{B.11}$$

where:

V - velocity along rocket axis,

 V_{\parallel} - vertical velocity,

 V_{\perp} - horizontal velocity.

Rocket angle is calculated based on updated velocities according to the equation B.12.

$$\alpha = \arccos(\frac{V_{\perp}}{V}) \tag{B.12}$$

where:

 α - rocket angle during the flight,

 V_{\perp} - horizontal velocity,

 \boldsymbol{V} - velocity along rocket axis.

C. History of changes

2013.12.27

— Initial release of english version of manual.